



Mariposa Party Rentals  
5 Ontario Street, Orillia, Ontario L3V 6H1  
Tel (705) 826-2601  
[www.mariposapartyrentals.ca](http://www.mariposapartyrentals.ca)

---

## Candy Floss Machine

To assemble machine for use

- ❑ Loosen screws on machine base to allow motor head to move freely.
- ❑ Place plastic screen around inside of metal bowl loosely using metal clips to hold in place. (This screen catches the floss and allows you to roll it onto the cone, if the screen is too tight on the bowl, air will not flow behind the screen and you will have difficulty twirling the floss)
- ❑ Pour approximately 1 cup of floss sugar into the motor head.
- ❑ Turn motor switch on. This makes the motor head spin.

### **You are now ready to make candyfloss!**

- ❑ Turn Heat switch on; it will take a couple of seconds for the sugar to warm up and start collecting on the sides of the bowl.
- ❑ Twirl cone around inside of bowl to collect floss. (One direction will work better than the other and be much easier!)

**When you are slowing down and do not wish to produce any more candyfloss:**

- ❑ Turn the heat and motor off.
- ❑ Remove bowl from machine
- ❑ Rinse bowl and screen with hot water
- ❑ **DO NOT USE WATER ON MOTOR HEAD** (Water will turn sugar into a hard substance that will ruin the machine)

**Floss sugar residue will not damage the machine or the flavour of the floss.**

- ❑ Tighten screws on machine base for transport. At this point you can turn the machine upside down over a garbage can to empty excess floss sugar from machine.
-